

SCHOKDEMPERS - AMORTISSEURS - CUSHIONS



Ref : 11401
 Cone holder
 White Overlock

077.011.401



Ref : 126540000
 Rubber cushion
 Brother Serger
 Viking 234

077.126.540



Ref : 130157051
 Rubber cushion
 Brother PS-1700/50

077.130.157



Ref : 174124
 Rubber cushion
 Singer 500, 600, 750

077.174.124



Ref : 194407-002
 Rubber cushion
 Foot control
 Singer 221, 301

077.194.407



Ref : 313909-451
 Cushion
 Singer 4600, 6230, 9000-94

077.313.909



Ref : 382337R
 Rubber cushion
 Singer 900 series

077.382.337



Ref : 45780
 Rubber leg cushion
 Singer 221

077.045.780



Ref : 7280
 Rubber cushion
 White 1640

077.007.280



Ref : P60899
 Cushion
 Fits most Sergers

077.060.899



Ref : X55942-150
 Rubber cushion
 Brother PS1900/1950

077.055.942



Ref : X75545-000
 Rubber cushion
 Brother 920D/925D

077.075.545



Ref : XA1805050
 Leg cushion
 Brother PE8200, 8500
 Babylock BLCC, BLDC,
 BLG

077.180.505



Ref : XA9386051
 Rubber cushion
 Brother ULT2001
 Babylock

077.938.605



Ref : XA9836051
 Rubber cushion
 Brother ULT2001
 Babylock

077.983.605

Ref : 357797-451
 Bed cushion
 Singer 2712, 2718, 2722,
 2724, 2730, 2732

077.357.797



Ref : H70043000
 Free arm rubber cushion
 Singer

077.700.430



Ref : 739064003
 Rubber cushion
 New Home/Janome 659,
 660

077.739.064



Ref : 410208
 Cushion leg
 Singer 14U

077.410.208



Ref : 604228
 Block mtr.
 Singer 900-2000

077.604.228



Ref : 604229
 Insert mtr. Shaft
 Singer 900

077.604.229