



SCHAREN "SPIRALE" CISEAUX - SCISSORS



Draadschaar
Ciseaux coupe-fil
 Thread scissor
 41718 - 7" **075.741.718**



Stoffenschaar
Ciseaux couturières
 Dressmaker scissor
 44018 - 7" **075.744.018**
 44020 - 8" **075.744.020**



Kleermakerschaar, blauw
Ciseaux tailleurs, bleu
 Tailor scissor, blue
 44518-7" **075.744.518**
 44520-8" **075.744.520**
 44523-9" **075.744.523**
 44525-10" **075.744.525**
 44530-12" **075.744.530**



Kleermakerschaar, blauw, linkshandig
Ciseaux tailleurs, bleu, gaucher
 Tailor scissor, blue, left handed
 44920 - 8" **075.744.920**
 44925 - 10" **075.744.925**



Kartelschaar, plast. handgrepen
Ciseaux cranteurs, manche plast.
 Pinking scissor, plastic handles
 97518 - 8" **075.797.518**



SCHAREN "JOKRE=ECO" CISEAUX - SCISSORS




Huishoudschaar
Ciseaux lingères
 Household scissor
 90113 - 5" **075.790.113**
 90115 - 6" **075.790.115**
 90118 - 7" **075.790.118**



Huishoudschaar
Ciseaux lingères
 Household scissor
 90218 - 7" **075.790.218**



Papierschaar
Ciseaux à papier
 Paperscissor
 90820 - 8" **075.790.820**
 90823 - 9" **075.790.823**
 90825 - 10" **075.790.825**

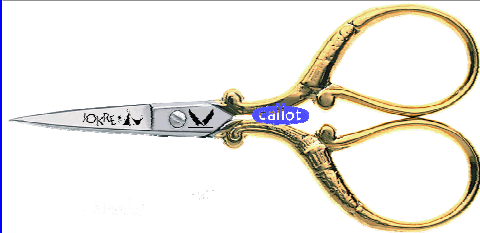

Borduurschaar
Ciseaux à broder
 Embroidery scissor
 91709 - 3,5" **075.791.709**



Huishoudschaar
Ciseaux lingères
 Household scissor
 93015 - 6" **075.793.015**
 93018 - 7" **075.793.018**



Huishoudschaar
Ciseaux lingères
 Household scissor
 93020 - 8" **075.793.020**
 93023 - 9" **075.793.023**
 93025 - 10" **075.793.025**



Kleermakerschaar
Ciseaux tailleurs
 Tailor scissor
 94020 - 8" **075.794.020**