

**ONDERDELEN VOOR SPANNINGEN - PIECES POUR TENSIONS - TENSION PARTS**

	<p>Ref : 153277-453          Tension indicator          For 422403-455  <b>077.153.277</b></p>		<p>Ref : 172217          Tension adaptor          For 422403-455  <b>077.172.217</b></p>
	<p>Ref : 2102          Tension disc          Singer 27, 127, 66  <b>085.002.102</b></p>		<p>Ref : 32574          Release pin          Singer 127, 27, 66, 31-15  <b>077.132.574</b></p>
	<p>Ref : 37984          Tension indicator stop washer          Singer          For 422403-455  <b>077.037.984</b></p>		<p>Ref : 422403-502 = 44879-472          Indicator tension white          Singer 247, 252  <b>077.044.880</b></p>
	<p>Ref : 422403-600          Tension stud gear          Singer 600  <b>078.422.404</b></p>		<p>Ref : 81572          Pin tension release  <b>077.081.572</b></p>
	<p>Ref : 68A          Stop washer  <b>077.000.068</b></p>		<p>Ref : 68C          Stop washer  <b>077.000.070</b></p>
	<p>Ref : 68D          Release washer  <b>077.000.071</b></p>		<p>Ref : 1560          Tension nut          Singer 127, 27, 66, 31-15, 99  <b>077.001.560</b></p>
	<p>Ref : 50291          Tension stud          Singer 15-30 (HA-17 tension)  <b>077.150.291</b></p>		<p>Ref : 125416          Tension indicator flange          Singer 15-30 (HA-17 tension)  <b>077.125.416</b></p>
	<p>Ref : 546949          Tension indicator          Singer 15-30 (HA-17 tension)  <b>077.546.949</b></p>		<p>Ref : 179602          Tension thread guide          For 422403-455  <b>077.179.602</b></p>
	<p>Ref : 547152          Tension thread guide          For 422403-455  <b>077.547.152</b></p>		<p>Ref : 0011337401          Thread regulator          Bernina 1000, 1100, 1200 series  <b>077.001.133</b></p>

**ONDERDELEN VOOR SPANNINGEN - PIECES POUR TENSIONS - TENSION PARTS**

025710132	Tension washer, Brother 920D, 934D	<b>087.025.710</b>
026020235	Tension washer, Brother 925D, 935D	<b>077.260.202</b>
047251042	Spring pin, Brother PL1050, 640D	<b>077.472.510</b>
108263001	Tension disc, Brother PE200, Babylock EM2	<b>087.108.263</b>
115187-101	Tension disc, Brother 920D, 934D	<b>087.115.187</b>
125416	Tension indicator, HA-17 flange	<b>077.125.416</b>
137874004	Tension dial, Brother 845, Babylock BL700	<b>077.137.874</b>
174395	Nut tension 172820-656, 174393	<b>077.174.395</b>
179602	Thread guide tension, for 422403	<b>077.179.602</b>
244048	Tension disc, Singer (plain)	<b>085.244.048</b>
353250	Thread guide tension, for 422403-455	<b>077.353.250</b>
4114248-03	Tension knob, Viking 6400	<b>077.411.424</b>
4122777-01	Tension, Viking 1050/90, 1100	<b>078.412.277</b>
44633	Tension disc, Singer 206, 306 series	<b>077.044.633</b>
4559	Tension washer, White 510	<b>077.004.559</b>
4561	Tension friction washer, White 510	<b>077.004.561</b>
4563	Tension clip ring, White 510	<b>077.004.563</b>
531885-454	Indicator tension, Singer 4538, 6021	<b>077.531.885</b>
531886-451	Cap tension, Singer 4538, 6021, 6221	<b>077.531.886</b>
547152	Thread guide tension, for 422403	<b>077.547.152</b>
X05012-000	Stud tension, Brother 920D, 934D	<b>077.501.200</b>
X05015-000	Tension dial, Brother Ratchet 920D/9	<b>077.501.500</b>
X57682051	Spring, Brother PC5000, PC6000, Babylock	<b>077.576.820</b>
X75618-001	Tension bracket, Brother 920D, 934D	<b>077.075.618</b>
X75627-001	Plate tension, Brother 920D, 934D	<b>077.075.627</b>
X75883-001	Spring tension, Brother 920D, 934D	<b>077.075.883</b>
X75910-001	Tension dial, Brother 920D, 934D left	<b>077.075.910</b>
X75910-002	Tension dial, Brother 920D, 934D right	<b>078.075.910</b>
X75910-003	Tension dial, Brother 920D, 934D upper	<b>077.075.911</b>
X75910-004	Tension dial, Brother 920D, 934D lower	<b>077.075.912</b>
X75981-001	Tension disc, Brother thread PL1500	<b>077.075.981</b>
X75992-001	Washer tension upper, Brother 925D	<b>077.075.992</b>
X76023-001	Spring tension thread, Brother PL15	<b>077.076.023</b>
X76873-001	Thread tension base, Brother PL1500	<b>077.076.873</b>
X76877-001	Tension release, Brother 640D, 920D	<b>077.076.877</b>
X76878-000	Nut tension, Brother 925D, 935D	<b>077.076.878</b>
X76879-000	Washer wave tension, Brother 925D, 935D	<b>077.076.879</b>
X76881-001	Thread tension dial (yellow), Brother PL1500, 1600	<b>077.076.881</b>
X76881-002	Thread tension dial (red), Brother PL1500, 1600	<b>078.076.881</b>
X76881-003	Thread tension dial (green), Brother PL1500, 1600	<b>077.076.882</b>
X76881-004	Thread tension dial (blue), Brother PL1500, 1600	<b>077.076.883</b>
X76882-001	Clutch tension, Brother 925D, 935D	<b>077.076.884</b>
X77167-001	Tension dial, Brother PL1050, 640D	<b>077.077.167</b>
X77167-002	Tension dial, Brother PL1050, 640D	<b>078.077.167</b>
X77167-003	Tension dial, Brother PL1050, 640D	<b>077.077.168</b>
X77167-004	Tension dial, Brother PL1050, 640D	<b>077.077.169</b>
X77175-001	Pin tension release, Brother 920D, PL1050, 640D	<b>077.077.175</b>
X77235-000	Tension disc, Brother PL1050, 640D	<b>077.077.235</b>
X77236-000	Tension disc (a), Brother PL1050, 640D	<b>077.077.236</b>
X77414-001	Spring tension, Brother 925D, 935D	<b>077.077.414</b>
X77720-001	Tension dial, Brother 925D, 935D (yellow)	<b>077.077.720</b>
X77720-002	Tension dial, Brother 925D, 935D (red)	<b>078.077.720</b>
X77720-003	Tension dial, Brother 925D, 935D (green)	<b>077.077.721</b>
X77720-004	Tension dial, Brother 925D, 935D (blue)	<b>077.077.722</b>
X77853-001	Tension release, Brother PL105, 640D	<b>077.077.853</b>
XA9449051	Tension release plate, Brother ULT2001, Babylock	<b>077.009.449</b>
XB0898-001	Tension dial, Brother 1034D (yellow)	<b>077.000.898</b>
XB0898-002	Tension dial, Brother 1034D (red)	<b>078.000.898</b>
XB0898-003	Tension dial, Brother 1034D (green)	<b>077.000.899</b>
XB0898-004	Tension dial, Brother 1034D (blue)	<b>077.000.900</b>
XB0934-001	Tension release, Brother 1034D	<b>077.000.934</b>