












**KLIKVOETEN - PIEDS CLIC-CLAC - FEET SNAP-ON
 SINGER SCHUIN/OBLIQUE/SLANT**

 <p>Ref : 542167 = 163706 Slant shank, snap-on Singer</p> <p>077.542.167</p>	 <p>Ref : 10402-S Blindhem foot Singer slant</p> <p>077.010.402</p>	 <p>Ref : 171463-451 Satin stitch foot Singer slant snap-on</p> <p>077.171.463</p>
 <p>Ref : 171480 Zipper foot Singer slant</p> <p>077.171.480</p>	 <p>Ref : 313150 = 163710 = 502280 Zigzag foot Singer slant wide</p> <p>077.313.150</p>	 <p>Ref : 313992-451 = 313999-451 Sliding buttonhole foot slant, plastic Singer</p> <p>077.313.992</p>
 <p>Ref : 381277 Snap-on 1-step buttonhole foot Singer</p> <p>077.381.277</p>	 <p>Ref : 421284-451 Foot 1-step Singer</p> <p>077.421.284</p>	 <p>Ref : 421284-500 Foot actuating spring for 421284-451</p> <p>077.421.285</p>
 <p>Ref : 5012-1 Hemmer foot Singer slant</p> <p>077.005.012</p>	 <p>Ref : 5012-2 Cording foot Singer slant</p> <p>077.005.013</p>	 <p>Ref : 506377 Buttonhole foot Singer slant</p> <p>077.506.377</p>
 <p>Ref : 541537 Straight stitch foot Singer slant</p> <p>077.541.537</p>	 <p>Ref : 446014-2 = 543714 Zigzag foot, slant, snap-on</p> <p>077.446.016</p>	 <p>Ref : BFS Beading foot Singer slant</p> <p>077.010.002</p>
 <p>Ref : P60778 Slant snap-on embroidery foot Singer</p> <p>077.060.778</p>	 <p>Ref : S701S Pintuck foot 7 grooves Singer slant</p> <p>077.000.702</p>	