

































PERSVOETEN - PIEDS PRESSEUR - PRESSER FEET FOR SINGER

 <p>Ref : 006916008 Foot straight stitch Singer 3709/22, 3810/20/25, 6510, 7312/22, 3812 077.691.608</p>	 <p>Ref : 006900008 Roller foot Singer 4205-4206-4210- 6510-6550-7312-7322- 7350-7358-7360 Elna 1500-1600-300 077.690.008</p>	 <p>Ref : 006910008 Foot shank Singer 1105, 1106, 1120, 1130 Elna 077.691.008</p>
 <p>Ref : 006914008 Foot button Singer 6510, 7312/22/50/58 077.691.408</p>	 <p>Ref : 006905008 Foot zipper Singer 6510, 7312/22/50/80 077.690.508</p>	 <p>Ref : 006904008 Blindhem foot Singer 6510, 7312, 7322, 7350, 7358 077.690.408</p>
 <p>Ref : 006174008 Foot buttonhole Singer 6510, 7312/22/50/80 077.061.748</p>	 <p>Ref : 006917008 Foot gathering Singer 6510, 7312/22/50/58 077.006.917</p>	 <p>Ref : 006813008 Foot cording Singer 6510, 7312/22/50/80 077.681.308</p>
 <p>Ref : 006918008 Foot ZZ Singer 6510, 7312/22/50/58 077.691.808</p>	 <p>Ref : 006907008 Overcasting foot Singer 2662, 2638 077.006.907</p>	 <p>Ref : 006812008 Foot blindhem Singer 1105/6, 1120/30 077.681.208</p>
 <p>Ref : 006806008 Foot ZZ Singer 1105/6, 1120/30 077.680.608</p>	 <p>Ref : 006803008 Foot overcast Singer 1105/6, 1120/30 077.680.308</p>	 <p>Ref : 006800008 Foot hemmer Singer 1105/6, 1120/30 077.680.008</p>
 <p>Ref : 006810008 Foot cording Singer 1105/6, 1120/30 077.681.008</p>	 <p>Ref : 006804008 Foot satin Singer 1105/6, 1120/30 077.680.408</p>	 <p>Ref : 006172008 Satin stitch foot Singer 3709, 3722, ... 077.617.208</p>
 <p>Ref : 006171008 Foot buttonhole Singer 3810/20/25 077.061.718</p>	 <p>Ref : 006909008 Foot buttonhole Singer 1105/6, 1120/30 077.069.908</p>	 <p>Ref : 321417008 Straight stitch foot Singer 117 077.321.417</p>

PERSVOETEN - PIEDS PRESSEUR - PRESSER FEET FOR SINGER 9910-9920-9940

 <p>Ref : HP30244 Foot overcast Singer 9910/20/40</p> <p>077.030.244</p>	 <p>Ref : HP11117 Foot quilting guide Singer 9910/20/40</p> <p>077.011.117</p>	 <p>Ref : HP12928 Foot buttonhole Singer sew on 9910/20/40</p> <p>077.012.928</p>
 <p>Ref : HP30686 Foot cording Singer 9910/20/40</p> <p>077.030.686</p>	 <p>Ref : HP31461 1/4" foot Singer 9910, 9920, 9940</p> <p>077.031.461</p>	 <p>Ref : HP33069 Foot open toe Singer 9410/20/40</p> <p>077.033.069</p>
 <p>Ref : HP30218-3 Foot blindhem Singer 9910/20/40</p> <p>077.302.183</p>	 <p>Ref : HP30685 Foot hemmer Singer 9410/20/40</p> <p>077.030.685</p>	 <p>Ref : HP31093 Foot buttonhole Singer XL3400</p> <p>077.031.093</p>
 <p>Ref : HP32969 Foot ZZ Singer 9410/20/40</p> <p>077.032.969</p>	 <p>Ref : HP30057 Zigzag foot Singer 9410/20/40 Singer Quantum XL3400</p> <p>078.030.057</p>	

