




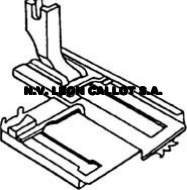


















































**KNOOPSGAT- EN KNOOPAANZETVOETEN - PIEDS BOUTONNIERE/POSE BOUTON - BUTTONHOLE FEET**

 <p><b>Ref : 4017</b>          Button foot, sew-on          Laag/bas/low</p> <p><b>077.004.017</b></p>	 <p><b>Ref : 6016</b>          Button foot, sew-on          Hoog/haut/high</p> <p><b>077.106.016</b></p>	 <p><b>Ref : 179911</b>          Plastic button foot, sew-on          Laag/bas/low          Holds the button firmly in place when attaching it to a garment.</p> <p><b>077.179.911</b></p>
 <p><b>Ref : 161168 = 381066</b>          Button foot, sew-on          Schuin/oblique/slant          Singer 2000A-6233-6234-6235-7000-7037</p> <p><b>077.161.168</b></p>	 <p><b>Ref : 1929 S</b>          Buttonhole foot          Schuin/oblique/slant          Self-sizing with gauge on side</p> <p><b>077.001.931</b></p>	 <p><b>Ref : 1929 H</b>          Buttonhole foot          Hoog/haut/high          Self-sizing with gauge on side</p> <p><b>077.001.930</b></p>
 <p><b>Ref : 1929 L</b>          Buttonhole foot          Laag/bas/low          Self-sizing with gauge on side</p> <p><b>077.001.929</b></p>	 <p><b>Ref : 1932 H</b>          Buttonhole foot          Hoog/haut/high</p> <p><b>078.001.932</b></p>	 <p><b>Ref : 1932 L</b>          Buttonhole foot          Laag/bas/low</p> <p><b>077.001.932</b></p>
 <p><b>Ref : 1932 S</b>          Buttonhole foot          Schuin/oblique/slant</p> <p><b>079.001.932</b></p>	 <p><b>Ref : 828MH-N</b>          Buttonhole foot          Slide high metal</p> <p><b>077.000.826</b></p>	 <p><b>Ref : 828ML-N</b>          Buttonhole foot          Low slide metal</p> <p><b>077.000.825</b></p>
 <p><b>Ref : 828MS-N</b>          Buttonhole foot          Slide slant metal</p> <p><b>077.000.824</b></p>	 <p><b>Ref : 828H-N</b>          Buttonhole foot          Slide high plastic</p> <p><b>077.000.829</b></p>	 <p><b>Ref : 828L-N</b>          Buttonhole foot          Slide low plastic</p> <p><b>077.000.828</b></p>
 <p><b>Ref : 41664 B</b>          Buttonhole guide          Kenmore 158.13572</p> <p><b>077.041.664</b></p>	 <p><b>Ref : 5551 B</b>          Buttonhole guide          Kenmore 158.17910</p> <p><b>077.055.511</b></p>	 <p><b>Ref : 5558</b>          Buttonhole foot with gauge          Hoog/haut/high</p> <p><b>077.005.558</b></p>
 <p><b>Ref : 98-694882-00</b>          Buttonhole foot          Praff sliding</p> <p><b>077.694.882</b></p>	 <p><b>Ref : 395710-17</b>          Buttonhole foot 4-step          Elna 1010-2002-2004-2006</p> <p><b>077.395.711</b></p>	 <p><b>Ref : 395525-35</b>          Buttonhole foot 4-step          Elna 8000-9000-Diva</p> <p><b>077.395.524</b></p>
 <p><b>Ref : 494500-20</b>          Buttonhole foot          Elna 8000-9000-Diva</p> <p><b>077.494.500</b></p>	 <p><b>Ref : 494420</b>          Buttonhole foot          Elna all models</p> <p><b>077.494.420</b></p>	 <p><b>Ref : XA4911151</b>          Buttonhole foot one-step          Babylock          Bother</p> <p><b>077.491.151</b></p>
 <p><b>Ref : X59369251</b>          Buttonhole foot 4-step          Babylock          Brother</p> <p><b>077.059.369</b></p>	 <p><b>Ref : XC2691051</b>          Buttonhole foot          Babylock          Brother</p> <p><b>077.269.151</b></p>	 <p><b>Ref : XA4973151</b>          Buttonhole foot one-step          Brother PS2200-2300-2500</p> <p><b>077.497.151</b></p>
 <p><b>Ref : X57789001</b>          Buttonhole foot slide          Brother</p> <p><b>077.057.789</b></p>	 <p><b>Ref : 128215001</b>          Buttonhole foot one-step          Brother</p> <p><b>077.128.215</b></p>	 <p><b>Ref : 76620</b>          Buttonhole foot one-step          Singer 7422-7424-7426-7442-7444-7446-7462-7464-7466-7468</p> <p><b>077.076.620</b></p>

**KNOOPSGAT- EN KNOOPAANZETVOETEN - PIEDS BOUTONNIERE/POSE BOUTON - BUTTONHOLE FEET**

 <p><b>Ref : 386012</b>          Buttonhole foot          Singer Quantum XL100</p> <p><b>077.386.012</b></p>	 <p><b>Ref : 86932</b>          Buttonhole foot one-step          Singer CE100-CE200</p> <p><b>077.086.932</b></p>	 <p><b>Ref : 283396</b>          Buttonhole foot          Singer Quantum CXL-LE-XL1</p> <p><b>077.283.396</b></p>
 <p><b>Ref : 386918</b>          Buttonhole foot one-step          Singer Quantum LE</p> <p><b>077.386.918</b></p>	 <p><b>Ref : 313992-451 = 313999-451</b>          Buttonhole foot low with sliding          Singer</p> <p><b>077.313.992</b></p>	 <p><b>Ref : 385097</b>          Buttonhole foot one-step          Singer DSX-Quantum LE/SX/SX-100</p> <p><b>077.385.097</b></p>
 <p><b>Ref : 006909008</b>          Buttonhole foot          Singer 1105-1107-1116-1120-1130-1525</p> <p><b>077.069.908</b></p>	 <p><b>Ref : 321424</b>          Buttonhole foot          Singer 117</p> <p><b>077.321.424</b></p>	 <p><b>Ref : 76322</b>          Buttonhole foot          Singer 117-118-2638-2639-2662</p> <p><b>077.076.322</b></p>
 <p><b>Ref : 77047</b>          Buttonhole foot          Singer 132Q-140Q</p> <p><b>077.077.047</b></p>	 <p><b>Ref : 423200-451</b>          Buttonhole foot          Singer 2210</p> <p><b>077.423.200</b></p>	 <p><b>Ref : 006171008</b>          Buttonhole foot          Singer 3810-3820-3822-3825-6550-7350-7360</p> <p><b>077.061.718</b></p>
 <p><b>Ref : 006174008</b>          Buttonhole foot          Elna 1500-1600-300          Singer 3709-3722-6510-7312-7322-7350-7360-7380</p> <p><b>077.061.748</b></p>	 <p><b>Ref : HP32948</b>          Buttonhole foot          Singer 9410-9420-9440</p> <p><b>077.032.948</b></p>	 <p><b>Ref : 820822013</b>          Buttonhole foot 4-step          Janome 5500-6000-MC6000-SD2014-SL2022-SS2015-SW2018E</p> <p><b>077.820.822</b></p>
 <p><b>Ref : 825822007</b>          Buttonhole foot 4-step          Janome</p> <p><b>077.825.822</b></p>	 <p><b>Ref : 820801005</b>          Buttonhole foot          Janome MC-6000</p> <p><b>077.820.801</b></p>	 <p><b>Ref : 4124080-01</b>          Buttonhole foot sensor          Husqvarna</p> <p><b>077.412.080</b></p>
 <p><b>Ref : 11311</b>          Buttonhole foot open-toe          Schuin/oblique/slant</p> <p><b>077.011.311</b></p>	 <p><b>Ref : 11306</b>          Buttonhole foot open-toe          Hoog/haut/high</p> <p><b>077.011.306</b></p>	 <p><b>Ref : 5645</b>          Buttonhole foot plastic          Hoog/haut/high</p> <p><b>077.105.645</b></p>
 <p><b>Ref : 55649</b>          Buttonhole foot open-toe          Laag/bas/low</p> <p><b>077.155.649</b></p>	 <p><b>Ref : 55701</b>          Buttonhole foot plastic          Laag/bas/low</p> <p><b>077.155.701</b></p>	 <p><b>Ref : 385356</b>          Buttonhole foot          Singer DSX-Quantum LE</p> <p><b>077.385.356</b></p>
 <p><b>Ref : 76360</b>          Foot buttonhole          Singer 2638, 2662 1-step</p> <p><b>077.076.360</b></p>		