

SCHUIFPLATEN - PLAQUES GLISSIERES - SLIDE PLATES



Ref : 66525
 Slide plate
 Singer 101

077.066.525



Ref : 168081
 Slide plate
 Singer 117

077.168.081



Ref : 55504
 Slide plate
 Singer 127 front

077.055.504



Ref : 55503
 Slide plate
 Singer 127 rear

077.055.503



Ref : 54512
 Slide plate
 Singer 128 front

077.054.512



Ref : 15147
 Slide plate
 Singer 15-30

077.015.147



Ref : 44838-891
 Slide plate
 Singer 200, 300, 400

077.044.838



Ref : 45358
 Slide plate
 Singer 201, 1200-1

077.045.358



Ref : 12432(LG)
 Slide plate
 Singer 31 class
 Consew
 Juki

085.012.432



Ref : 172956
 Slide plate
 Singer 417, 750 series

077.172.956



Ref : 116080
 Slide plate
 Singer 500, 800

077.116.080



Ref : 310739-451
 Slide plate
 Singer 502/7/9/13

077.310.739



Ref : 356715
 Slide plate
 Singer 5040C, FM17,
 FM21
 For new machines

077.356.715



Ref : 179982
 Slide plate
 Singer 5605, 5705, 5610,
 5710

077.179.982



Ref : 314666
 Slide plate
 Singer 5910, 6233

077.314.666



Ref : 163477
 Slide plate
 Singer 600 series

077.163.477



Ref : 546018
 Slide plate
 Singer 610, 680, 690

077.546.018



Ref : 446481
 Slide plate
 Singer 6201-6217

077.446.481



Ref : 313166
 Slide plate
 Singer 6234/5, 6267

077.313.166



Ref : 32569
 Slide plate
 Singer 66,99 class

077.032.569



Ref : 382710
 Slide plate
 Singer 724, 774, 776

077.382.710



Ref : 382801
 Slide plate
 Singer 900-2000

077.382.801



Ref : 408034
 Slide plate
 Singer 935U, 1411U

077.408.034



Ref : SP65
 Slide plate
 Nelco, Sanwa

071.340.560



Ref : 387427
 Slide plate
 Singer 5000

077.387.427



 
Ref : 310739-451
 Slide plate
 Singer 502/7/9/13, 530,
 830

077.310.739



Ref : 720003006
 Slide plate
 Janome 100, 105, 106,
 108, 110

077.720.003



Ref : SP8NS
 Slide plate
 Janome 670-702

077.800.000



Ref : 732013202
 Slide plate
 Janome S650, S750

077.732.013



Ref : 4125134-01
 Slide plate
 Viking/Husqvarna
 Design 1, Design 2

077.412.513

