


































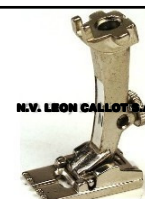


















PERSVOETEN - PIEDS PRESSEUR - PRESSER FEET FOR BERNINA 800-1630, 530→730, 830→1630, 940, 1000

 <p>Ref : 0011277100 Foot 1/4" Bernina #37</p> <p>077.001.127</p>	 <p>Ref : 0011287000 Foot quilting Bernina big #29</p> <p>077.001.128</p>	 <p>Ref : 0012507000 Buttonhole foot Bernina auto #3A</p> <p>077.001.250</p>
 <p>Ref : 0019477000 Adaptor foot Bernina 830-1630, #75</p> <p>077.001.947</p>	 <p>Ref : 0019857000 Adaptor ruffler Bernina #77 <i>Support pour fronceur</i></p> <p>077.001.985</p>	 <p>Ref : 0025767000 Foot ZZ Bernina #1 forward/reverse</p> <p>077.002.576</p>
 <p>Ref : 0025777000 Foot overlock Bernina #2</p> <p>077.002.577</p>	 <p>Ref : 0025787000 Foot buttonhole Bernina 830-1630, #3</p> <p>077.002.578</p>	 <p>Ref : 0025797000 Foot zipper Bernina #4</p> <p>077.002.579</p>
 <p>Ref : 0025807000 Foot blindhem Bernina #5</p> <p>077.002.580</p>	 <p>Ref : 0025847000 Foot darning Bernina #9</p> <p>077.002.584</p>	 <p>Ref : 0025857000 Foot edge stitch Bernina #10</p> <p>077.002.585</p>
 <p>Ref : 0025887000 Open toe foot Bernina #20</p> <p>077.002.588</p>	 <p>Ref : 0025907000 Foot pintuck Bernina 5-G #31</p> <p>077.002.590</p>	 <p>Ref : 0025917000 Foot pintuck Bernina 7-G #32</p> <p>077.002.591</p>
 <p>Ref : 0025927000 Foot pintuck Bernina 9-G #33</p> <p>077.002.592</p>	 <p>Ref : 0025967000 Foot gathering Bernina #16</p> <p>077.002.596</p>	 <p>Ref : 0029517000 Foot overlock Bernina Bluky (#12)</p> <p>077.002.951</p>
 <p>Ref : 0029557000 Foot hemmer Bernina #64</p> <p>077.002.955</p>	 <p>Ref : 0029567000 Foot hemmer Bernina #61 N-2mm.</p> <p>077.002.956</p>	 <p>Ref : 0029577000 Foot hemmer Bernina #62 S.S.</p> <p>077.002.957</p>
 <p>Ref : 0029597000 Foot button Bernina #18 sew-on</p> <p>077.002.959</p>	 <p>Ref : 0029617000 Foot hemmer 3mm. Bernina #63</p> <p>077.002.961</p>	 <p>Ref : 0029637000 Foot S.S. Bernina #13</p> <p>077.002.963</p>
 <p>Ref : 0062617000 Shank adaptor Bernina 1008</p> <p>077.006.261</p>	 <p>Ref : 0063887000 Foot zipper Bernina #14 with guide</p> <p>077.006.388</p>	 <p>Ref : 0060827300 Shank Bernina 125-200</p> <p>077.608.273</p>
 <p>Ref : 0304477000 Embroidery foot #15</p> <p>077.030.447</p>	 <p>Ref : 0315977000 Embroidery foot #26</p> <p>077.031.597</p>	 <p>Ref : 0019477000+217-72009 Foot blindstitch Bernina</p> <p>077.001.947+077.217.720</p>

PERSVOETEN - PIEDS PRESSEUR - PRESSER FEET FOR BERNINA 100 (190), 120-220

 <p>Ref : 0083677000 Adaptor foot Bernina 100-190, #75N</p> <p>077.836.770</p>	 <p>Ref : 0083687000 Adaptor ruffler Bernina 100-190, #75N <i>Support pour fronceur</i></p> <p>077.008.368</p>	 <p>Ref : 0084467000 Foot overlock Bernina 100-190, #2N</p> <p>077.008.446</p>
 <p>Ref : 0084477000 Foot buttonhole Bernina 130-190 #3N</p> <p>077.008.447</p>	 <p>Ref : 0084487000 Foot zipper Bernina 100-180 #4N</p> <p>077.844.870</p>	 <p>Ref : 0084597000 Foot zipper Bernina 100-190, #14N with guide</p> <p>077.008.459</p>
 <p>Ref : 0084627000 Foot open toe Bernina 100-190, #20N</p> <p>077.008.462</p>	 <p>Ref : 0084717000 Foot pintuck Bernina 100-190 5-G, #31N</p> <p>077.008.471</p>	 <p>Ref : 0084727000 Foot pintuck Bernina 100-190 7-G #32N</p> <p>077.008.472</p>
 <p>Ref : 0084737000 Foot pintuck Bernina 100-190 9-G #33N</p> <p>077.008.473</p>	 <p>Ref : 0084747000 Foot 1/4" Bernina 100-190 #37N</p> <p>077.008.474</p>	 <p>Ref : 0089687000 Foot walking Bernina 930-1630 origin</p> <p>077.008.968</p>
 <p>Ref : 0089697000 Foot walking Bernina 120-200 origin</p> <p>077.008.969</p>	 <p>Ref : 0084457000 Zigzag foot #1N Bernina 100-190 Forward/Reverse</p> <p>077.008.445</p>	 <p>Ref : 0084547000 Darning foot #9</p> <p>077.008.454</p>
 <p>Ref : 0084677000 Freehand emb. Foot #24</p> <p>077.008.467</p>	 <p>Ref : 0084697000 Freehand quilting foot #29</p> <p>077.008.469</p>	 <p>Ref : 0083547000 Eyelet emb. foot #92</p> <p>077.008.354</p>
 <p>Ref : 0083867200 (55705B) Ruffler</p> <p>077.008.386</p>	 <p>Ref : P60443 Foot walking quilting Bernina 120-220</p> <p>077.060.443</p>	 <p>Ref : P60445 Foot walking quilting Bernina 730, 830, 900</p> <p>077.060.445</p>
 <p>Ref : P60446 Foot walking quilting Bernina 1000-1630</p> <p>077.060.446</p>	 <p>Ref : 3700B-BERNINA Flower stitcher</p> <p>078.003.700</p>	 <p>Ref : A1501-776-OBO Presser foot Bernina 2000DE, 2000D</p> <p>077.150.177</p>
 <p>Ref : A1501-778-OBO Presser foot Bernina 2500DCE</p> <p>078.150.177</p>	 <p>Ref : 0083677000+217-72009 Foot blindstitch Bernina</p> <p>077.836.770+077.217.720</p>	