

























PERSVOETEN - PIEDS PRESSEUR - PRESSER FEET FOR BROTHER 5 mm. ZIGZAG

<p>Ref : 138134-051 Shank Brother XL2010-XL2030-XL3010-XL4060-PS1000-PS1250-PS1800-PS2200-PS2300-PS2500-LS1520-LS2125-LS2720/5-LS2820/2-LS2920-most VX series-XL5020/1/2-XL5030/1/2-XL5050/60/70-XL5130/2-XL5300/40-XL5500-XL5600-XL5700-RS/15-RS/25-RS/35</p> <p style="text-align: right;">077.138.134</p>	 <p>Ref : 129855001 Foot shank Brother PS1700-PS1750-PS1900</p> <p style="text-align: right;">077.129.855</p>	
 <p>Ref : XA8970051 Foot shank Brother XL6040/50/60-XL6452-XL6552</p> <p style="text-align: right;">077.897.051</p>	 <p>Ref : PD5011-4 Zigzag foot Brother XL2010-XL2030-XL3010-XL4060-LS1520-LS2125-LS2720/5-LS2820/5-LS2920-most VX series...</p> <p style="text-align: right;">077.501.107</p>	 <p>Ref : X51953001 Foot zigzag Brother PS1000-PS1200-PS2500-XL6452-XL6552</p> <p style="text-align: right;">077.519.530</p>
 <p>Ref : 128215001 Foot buttonhole 1-step Brother XL2010-XL2030-XL3010-XL3200-PS1250-PS1750-PS1800-PS1900-PS1950-PS2100</p> <p style="text-align: right;">077.128.215</p>	 <p>Ref : X59369251 4-step buttonhole foot Brother XL5020/1/2-XL5130-XL5500-XL6040-XL6050-XL6060-PS1000</p> <p style="text-align: right;">077.059.369</p>	 <p>Ref : XA4911151 Foot buttonhole one-step Brother XL5010/1/2-XL5030/1/2-XL5070-XL6452-XL6552</p> <p style="text-align: right;">077.491.151</p>
 <p>Ref : XA4973151 1-step buttonhole foot Brother PS2200-PS2300-PS2500</p> <p style="text-align: right;">077.497.151</p>	 <p>Ref : 121443 Double shirring foot</p> <p style="text-align: right;">077.121.443</p>	 <p>Ref : 129868001 Foot blindhem Brother XL2010-2030</p> <p style="text-align: right;">077.129.868</p>
 <p>Ref : 4021 Foot darning</p> <p style="text-align: right;">077.004.021</p>	 <p>Ref : PD5011-15 Pintuck foot, plate snap-on</p> <p style="text-align: right;">077.501.121</p>	 <p>Ref : PD5011-18 Zigzag foot, snap-on teflon</p> <p style="text-align: right;">077.501.124</p>
 <p>Ref : PD5011-19 Binder foot, snap-on</p> <p style="text-align: right;">077.501.125</p>	 <p>Ref : PD5011-21 Zipper foot, snap-on concealed</p> <p style="text-align: right;">077.501.127</p>	 <p>Ref : 55411 Zipper foot, low solid adjustable</p> <p style="text-align: right;">077.055.411</p>
 <p>Ref : P60613 1/4" foot with guide, snap-on, patch work</p> <p style="text-align: right;">077.060.613</p>	 <p>Ref : X51162001 Foot overlock Brother B8200 (G)</p> <p style="text-align: right;">077.511.620</p>	 <p>Ref : X59370051 Zipper foot Brother B8200 (I)</p> <p style="text-align: right;">077.593.700</p>
 <p>Ref : X81014002 Foot hemmer Brother 5mm. PE8200, PE8500</p> <p style="text-align: right;">077.810.140</p>	 <p>Ref : XA7872002 Foot pico 5mm. Brother PS, VX series</p> <p style="text-align: right;">077.787.200</p>	 <p>Ref : XA7884002 Foot fringe Brother PE8200/8500</p> <p style="text-align: right;">077.788.400</p>
 <p>Ref : XC1947002 Foot conceal, metal Brother</p> <p style="text-align: right;">077.194.702</p>	 <p>Ref : XC1954002 Foot straight stitch Brother 5mm. snap-on</p> <p style="text-align: right;">077.195.400</p>	






























PERSVOETEN - PIEDS PRESSEUR - PRESSER FEET FOR BROTHER PQ1300, PQ1500

 <p>Ref : 136021001 Foot presser Brother PQ1500, 1300 077.136.021</p>	 <p>Ref : NP 63 P = 148475001 Invisible zipper foot Brother PQ1500, 1300 071.321.868</p>	 <p>Ref : X57138001 Foot hemmer Brother PQ1500, 1300 077.571.380</p>
 <p>Ref : XA7255201 Foot quilting Brother PQ1500/1300 077.725.520</p>	 <p>Ref : XA7258001 Foot 1/4" Brother PQ1500, PQ1300 077.725.800</p>	 <p>Ref : XA7256001 Seam guide Brother PQ1300, PQ1500 077.725.600</p>
		

PERSVOETEN - PIEDS PRESSEUR - PRESSER FEET FOR BROTHER 7mm. TOP LOADING ZIG-ZAG

 <p>Ref : XC1961002 Cording foot, 7 hole Brother 7mm. 077.196.100</p>	 <p>Ref : XC1962002 Cording foot, 5 hole Brother 7mm. 077.196.200</p>	 <p>Ref : PD5011-19 Binder foot, snap-on 077.501.125</p>
 <p>Ref : 6290 Tap binder foot, snap-on 077.006.290</p>	 <p>Ref : P6069 J-size Double piping foot Size : 6mm-1/4" 077.006.070 3mm-1/8" 077.006.071 5mm-3/16" 077.006.072</p>	 <p>Ref : 129855001 Foot shank Brother 845-PC5000/6000/7000/8000-PE300S-PC2800-PC3000-PC6500 077.129.855</p>
 <p>Ref : XA3808001 Foot shank Brother PE8200 (slide in) BBL ESE (use XA4789001) 077.380.801</p>	 <p>Ref : XA4789001 Foot shank Brother ULT2001-ULT2002-ULT2003-PE8500 BBL ESG, ESE2 077.478.901</p>	 <p>Ref : XA8970051 Foot shank Brother PE4000D 077.897.051</p>
 <p>Ref : XC3015051 Foot shank Brother NX200/400/600-CS8060-CS8150-NV500D-SE270D-NV4000D 077.301.505</p>	 <p>Ref : XA6023001 Foot shank adaptor Brother PE8200 077.602.300</p>	 <p>Ref : XA6027001 Foot shank adaptor Brother PE8500-ULT2001/2/3 077.602.701</p>
 <p>Ref : 137748101 Foot ZZ Brother PC2800-PC3000-PC5000-PC6000-PC6500-PC7000-PC8000-PE8200-PE8500-ULT2001-ULT2002-ULT2003 077.137.748</p>	 <p>Ref : X51953001 Foot zigzag Brother PE300S-PE400D 077.519.530</p>	 <p>Ref : XC3021051 Foot ZZ Brother NV4000D-NX200-NX400-NX600 077.302.105</p>
 <p>Ref : X57789001 1-step buttonhole foot Brother PC2800-PC3000-PC5000-PC6000-PC6500-PC7000-PC8000-NV4000D-PE300S-PE400D-PE8200-PE8500-ULT2001/2/3 077.057.789</p>	 <p>Ref : XC2691051 1-step buttonhole foot Brother NX200/400/600-CS8060-CS8150-NV500D-SE270D 077.269.151</p>	 <p>Ref : 4021-B82 Foot darning Brother PE8200-PE8500-ULT2001/2/3 077.402.182</p>
 <p>Ref : P60436 Foot darning giant Brother PE8200-PE8500-ULT2001/2/3 077.060.436</p>	 <p>Ref : P60438 Open toe darning foot Brother PE8200-PE8500-ULT2001/2/3 077.060.438</p>	 <p>Ref : X59821001 Foot darning Brother PC5000/6000/7000/8000-NV4000D 077.059.821</p>

PERSVOETEN - PIEDS PRESSEUR - PRESSER FEET FOR BROTHER 7mm. TOP LOADING ZIG-ZAG

 <p>Ref : X59307001 Foot embroidery Brother PE100</p> <p>077.059.307</p>	 <p>Ref : XA2159101 Foot embroidery Brother PE8200</p> <p>077.021.591</p>	 <p>Ref : XA3625001 Foot embroidery Brother PE150-PE180D-PE200</p> <p>077.362.500</p>
 <p>Ref : XA5357001 Foot embroidery Brother PE300S-PE400D</p> <p>077.535.700</p>	 <p>Ref : XA5500001 Foot embroidery Brother PE8200-PE8500-ULT2001/2/3 (screw)</p> <p>077.550.000</p>	 <p>Ref : XA5891001 Foot embroidery Brother PE8500-ULT2001/2/3 (slide in)</p> <p>077.589.101</p>
 <p>Ref : P60410 Free motion foot 1/4"-1/8" mark All low shank/laag/bas</p> <p>077.060.410</p>	 <p>Ref : P60412 Free motion foot 1/4"-1/8" mark Brother PE8200/8500-ULT2001/2/3</p> <p>077.060.412</p>	 <p>Ref : P60415 Foot roller 7mm. snap-on</p> <p>077.060.415</p>
 <p>Ref : P60416 Pintuck foot - 9 grooves Snap-on</p> <p>077.060.416</p>	 <p>Ref : P60613 1/4" foot with spring guide</p> <p>077.060.613</p>	 <p>Ref : P60709 Edge joining foot Snap-on, 7mm.</p> <p>077.060.709</p>
<p>Ref : P60963 Felling foot Snap-on, 4mm.</p> <p>077.060.963</p>	 <p>Ref : P60973 Felling foot Snap-on, 6mm.</p> <p>077.060.973</p>	 <p>Ref : PD5011-18 Teflon foot, snap-on</p> <p>077.501.124</p>
 <p>Ref : 130489001 Button sew on foot</p> <p>077.130.489</p>	 <p>Ref : 136677001 Foot side cutter Brother PC7000, PC7500, PC8000, 895 (S)</p> <p>077.136.677</p>	 <p>Ref : 137988101 Monogramming foot Brother 845</p> <p>077.137.988</p>
 <p>Ref : X51162001 Overcast foot Brother B8200 (G)</p> <p>077.511.620</p>	 <p>Ref : X51804001 Foot stitch Brother PC7000, PC8000, 895 BBL ES1, ES2</p> <p>077.518.040</p>	 <p>Ref : X53840301 Monogramming foot Brother all models but 845</p> <p>077.538.403</p>
 <p>Ref : X56409001 Foot blindhem Brother B8200 (R)</p> <p>077.056.409</p>	 <p>Ref : X59370051 Zipper foot Brother B8200 (I)</p> <p>077.593.700</p>	 <p>Ref : X81015002 Foot hemmer 7mm. Brother PE8200-PE8500</p> <p>077.810.150</p>
 <p>Ref : XA7868002 Foot open toe Brother PE8200, PE8500</p> <p>077.786.802</p>	 <p>Ref : XA7874002 Foot sequence Brother pearl PE8200/8500</p> <p>077.787.400</p>	 <p>Ref : XA7881002 Foot cording Brother PE8200-PE8500</p> <p>077.788.100</p>
 <p>Ref : XA7884002 Foot fringe Brother PE8200/8500</p> <p>077.788.400</p>	 <p>Ref : XC1793002 Foot straight stitch 7mm. Brother top load</p> <p>077.179.302</p>	 <p>Ref : XC1947002 Foot conceal, metal Brother</p> <p>077.194.702</p>

PERSVOETEN - PIEDS PRESSEUR - PRESSER FEET FOR BROTHER 7mm. TOP LOADING ZIG-ZAG



Ref : PD5011-21
 Zipper foot, snap-on
 concealed

077.501.127



Ref : XC1957002
 Foot blindhem
 Brother ULT2001/2

077.195.700



Ref : XC1958002
 Foot clear view Brother

077.195.802

PERSVOETEN - PIEDS PRESSEUR - PRESSER FEET FOR BROTHER



Ref : X76663-001
 Elasticator foot

077.076.663



Ref : P60452
 Deluxe walking foot
 Brother PE8200-PE8500-
 ULT2001-ULT2002-
 ULT2003

077.060.452




Ref : P60994
 Giant darning foot
 Brother low PE100

078.060.994



Ref : P60618
 Snap-on 1/4" foot with
 guide

077.060.618

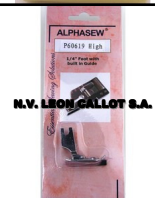

Ref : P60619
 1/4" foot with spring

077.060.619



Ref : P60455
 Deluxe walking foot
 Laag/bas/low shank

077.060.455



Ref : XC1949002
 Snap-on 7mm teflon foot

077.194.902



Ref : 121441
 Foot shirring
 Laag/bas/low center

077.121.441



Ref : 151
 Foot roller
 Laag/bas/low

077.000.154



Ref : 156-L = 10400-L
 Foot blindhem Singer
 Laag/bas/low

077.000.156



Ref : 156 H = 10401
 Foot blindstitch
 Hoog/haut/high

077.000.157



Ref : 156 SN = 10402
 Foot blindhem
 Schuin/oblique/slant

077.000.158



Ref : 10449 = HZWK(C)
 Foot walking
 Laag/bas/low center
 Brother PS1000
 Elna Star
 Babylock BL1560

077.300.399



Ref : 11975
 Foot rollhem
 White 208, 734/D

077.011.975



Ref : 161455
 Foot all purpose
 Laag/bas/low shank

077.161.455



Ref : 179911
 Foot button sew-on plastic
 Laag/bas/low

077.179.911



Ref : 179947-451
 Foot blindhem plastic
 Laag/bas/low

077.179.947



Ref : 1895
 Foot fringe I
 Laag/bas/ow center

077.001.895



Ref : 381213
 Foot guide for blindstitch
 Laag/bas/low

077.381.213



Ref : 4017
 Foot button sew-on
 Laag/bas/low

077.004.017



Ref : 4020
 Foot cording
 Laag/bas/low

077.004.020



Ref : 4021-L
 Foot darning ZZ large hole
 Laag/bas/low






078.004.021



Ref : P42686
 Foot multicord
 Laag/bas/low

077.042.686

PERSVOETEN - PIEDS PRESSEUR - PRESSER FEET FOR BROTHER

 <p>Ref : P60001 Foot hemmer, 1/4" Laag/bas/low center</p> <p>077.060.001</p>	 <p>Ref : P60101 Foot sequins Laag/bas/low</p> <p>077.060.101</p>	 <p>Ref : P60444 Foot walking Laag/bas/low quilting</p> <p>077.060.444</p>
 <p>Ref : P60447 Foot walking Laag/bas/low quilting</p> <p>077.060.447</p>	 <p>Ref : P60470 Foot binder bias 1/2" Laag/bas/low</p> <p>077.060.470</p>	 <p>Ref : P60600-G Foot 1/4" patch work with guide Laag/bas/low</p> <p>077.060.600</p>
 <p>Ref : P60603 1/4" patch work foot, snap-on, for shank 5011-1</p> <p>077.060.603</p>	 <p>Ref : P60604-G Foot 1/4" patch work clear, with guide Laag/bas/low</p> <p>077.060.604</p>	 <p>Ref : P60610 Foot 1/4" spring type Laag/bas/low shank</p> <p>077.060.610</p>
 <p>Ref : P60706 Foot edge join 7mm. Laag/bas/low</p> <p>077.060.706</p>	 <p>Ref : P60791 Foot embroidery Deluxe (open toe with shank) Laag/bas/low</p> <p>077.060.791</p>	 <p>Ref : P60801 Foot 1/4" Laag/bas/low</p> <p>077.060.801</p>
 <p>Ref : P60805 Foot pintuck, 5 deep grooves, metal, laag/bas/ low</p> <p>077.060.805</p>	 <p>Ref : P60810 Foot pintuck, 7 grooves plastic, laag/bas/low</p> <p>077.060.810</p>	 <p>Ref : P60815 Foot pintuck, 7 grooves, metal, laag/bas/low</p> <p>077.060.815</p>
 <p>Ref : P60820 Foot applique Laag/bas/low</p> <p>077.060.820</p>	 <p>Ref : P60830 Foot cording 1/8" Laag/bas/low</p> <p>077.060.830</p>	 <p>Ref : RWA1 Foot walking Laag/bas/low center</p> <p>077.010.005</p>
 <p>Ref : S701L Foot pintuck Singer Laag/bas/low</p> <p>077.000.701</p>	 <p>Ref : RWA 10 = X80927001 Foot walking Brother PE100/200, PS1000- 2150/8200, PC5000-9000</p> <p>077.010.007</p>	 <p>Ref : XA7253001 Foot walking Brother PQ1500/1300</p> <p>077.725.300</p>
 <p>Ref : XC1793002 Snap-on straight stitch foot, 7mm. Brother, Singer, Babylock, Elna</p> <p>077.179.302</p>	 <p>Ref : XA4322001 Quilting foot Brother NV1500, NV1500D, NV2500D</p> <p>077.043.220</p>	 <p>Ref : XC3829021 Embroidery foot Brother NV500D, SE270D</p> <p>077.382.902</p>
 <p>Ref : XC4901051 Zigzag foot Brother XL2600/10/20, XL3500</p> <p>077.490.105</p>	 <p>Ref : XD0313051 Foot U presser Brother NV1500/D, NV2500/D</p> <p>077.031.305</p>	 <p>Ref : XD0474051 Embroidery foot Brother NV1000</p> <p>077.047.405</p>
 <p>Ref : XC2242051 Shank Brother ULT2003</p> <p>077.224.205</p>		